

NITTAN

Document No: *NISM/ST-H2-AS/01*
Date: *JUNE 2016*

Sensortec

ST-H2-AS–ANALOGUE ADDRESSABLE HEAT SENSOR INSTRUCTION MANUAL

CE



Quality System Certificate No. 041
Assessed to BS EN ISO 9001:2008

NITTAN

Sensortec.....

*The **ST-H2-AS** advanced analogue addressable heat sensor forms part of the Range of analogue addressable fire sensors from Nittan Europe Ltd called **Sensortec**.*

*The **ST-H2-AS** together with the **ST-PY-AS** are elegantly designed, low profile fire sensors which are aesthetically pleasing, thus enabling them to blend unobtrusively into modern working environments.*

*The **Sensortec** analogue addressable range all feature the very latest technological advancements such as micro-processor design, increasing reliability and performance.*

CONTENTS:-

Section 1	- Introduction	- Page 2
Section 2	- Sensor Models	- Page 2
Section 3	- Base Models	- Page 2
Section 4	- Installation	- Page 3
Section 5	- Maintenance & Cleaning	- Page 3
Section 6	- Specifications	- Page 4
Section 7	- Environmental Parameters:-	- Page 4
	- Temperature	- Page 4
	- Humidity	- Page 4
Section 8	- EMC	- Page 4
Section 9	- Address Setting	- Page 5
Section 10	- Connections	- Page 6
Section 11	- Dimensions	- Page 6

Section 1 - INTRODUCTION

The ST-H2-AS is an attractively-styled, low profile heat sensor for use with Nittan **Sensortec** protocol control panels.

ST-H2-AS features:

- * **Low profile, stylish appearance**
- * **Soft addressing**
- * **Low monitoring current**
- * **Supplied with protective dust cover**
- * **Patented OMNIVIEW™ 360° LED fire alarm indicator**
- * **Remote indicator output**
- * **Compatible with UB-4, UB-6-EV and STB-4SE-EV bases**
- * **Non-polarised terminals**
- * **Room temperature information can be separately taken**

Section 2 - SENSOR MODELS

The ST-H2-AS heat sensor has two terminals for connection onto the two wire loop. Terminal 3 (RIL) provides a switched current sink function which operates when the detector goes into alarm condition, suitable for the operation of function such as a remote indicator. Terminal 3 (RIL) output current is limited to 3mA.

Section 3 - BASE MODELS

A variety of bases are available for use with the ST-H2-AS detectors. It is important to use the correct base for each application. The available base models are:

i) UB-4 base: For standard use with ST-H2-AS series heat detector.

ii) UB-6-EV base: For standard use with ST-H2-AS series heat detector.

iii) STB-4SE-EV base: Similar to UB-6-EV base, except deeper.

Sensortec

ST-H2-AS ANALOGUE

ADDRESSABLE HEAT SENSOR

INSTRUCTION MANUAL

Ref No: **NISM/ST-H2-AS/01**DATE: **JUNE 2016**PAGE: **3 of 5** ISSUE: **01**

Section 4 - INSTALLATION

In normal use, the ST-H2-AS heat sensor will be installed at ceiling level. Pass the field wiring through the cable hole in the centre and from the rear of the base. Offer up and affix the base to the ceiling or conduit fitting with screws via the base mounting holes. Connect the field wiring to the base terminals, as detailed in Section 11 making sure the wiring does not obstruct fitting of the sensor head. Fit the heat sensor head by inserting it into the base and turning clockwise until the notch in the sensor's rim aligns with base locking screw. The OMNIVIEW™ 360° LED alarm indicator permits visibility from any angle.

Note: The address must be set before the sensor is fitted into place.

Fit the plastic dust cover supplied over the sensor to keep out dust etc, until the system is commissioned. If the dust cover is not fitted and the environment is dusty, such as when building work is being completed, the device maybe be damaged by internal contamination. At commissioning, the dust cover should be removed and discarded.

NOTE: THE PLASTIC DUST COVER MUST BE REMOVED FROM THE SENSOR IN ORDER FOR THE SENSOR TO FUNCTION CORRECTLY.

Section 5 - MAINTENANCE AND CLEANING

Maintenance:

The ST-H2-AS sensor is a high quality product engineered for reliability. In order to obtain optimum performance, periodic maintenance is required. If proper preventative maintenance is not carried out, there is a likelihood of malfunction, including false alarms.

Servicing:

Servicing of the system should be carried out in accordance with the requirements of BS 5839 Part 1, Fire Detection and Alarm Systems for Buildings: Code of Practice for System Design, Installation and Servicing. The maintenance procedures described below, should be conducted with the following frequency:

One month after installation: Routine Inspection and every 3 months thereafter.

Every 6 months: Operational Test.

Every 12 months: Functional Test and Cleaning.

All above frequencies of maintenance are dependent on ambient conditions.

Routine Inspection

- i) Ensure the sensor head is secure and undamaged.
- ii) Check the heat entry apertures are in no way obstructed.
- iii) Ensure that the surface of the sensor's outer cover is clean. If there are deposits due to the presence of oil vapour, dust etc, then the sensor should be cleaned in accordance with the cleaning instructions detailed later in this manual. It may be advisable to ensure that such cleaning is conducted regularly in future.
- iv) Ensure that no equipment which may generate excessive heat has been installed in the vicinity of the sensor since the last routine inspection. If such equipment has been installed, then you should notify the Fire Safety Officer or other competent authority that its presence may cause false alarms.

Operational Test

The purpose of the Operational Test is to confirm the sensor's correct operation in response to a heat condition.

NOTE: When carrying out site testing of Analogue Addressable Sensortec sensors, the CIE shall be set to test mode prior to beginning the tests.

- i) Take any necessary precautions at the control panel to limit the sounding of the alarm sounders/bells and any fire service summoning device.
- ii) Test the sensor with heat from a warm air gun designed for heat sensor testing (e.g. 'No Climb - Solo' heat sensor tester). Check that the sensor gives an alarm condition within 10-20 seconds depending upon the sensor grade and the applied air temperature. Check that the LED indicator on the sensor illuminates.

NOTE: Hot air blowers sold for paint stripping, soldering pipes etc. generate sufficient heat to damage the sensor and should not be used for testing heat sensors.

- iii) After the sensor has given the alarm condition, reset the sensor from the control panel. It may be necessary to allow a short time to elapse before resetting the sensor, to allow any residual heat from the test to disperse (The Panel may automatically reset if "Test Mode" is used).

- iv) Before proceeding to the next sensor, ensure that the sensor just tested does not re-operate due to the presence of residual heat.

NITTAN

Sensortec
ST-H2-AS ANALOGUE
ADDRESSABLE HEAT SENSOR
INSTRUCTION MANUAL

Ref No: **NISM/ST-H2-AS/01**DATE: **JUNE 2016**PAGE: **4 of 5** ISSUE: **01****Functional Tests:**

The functional test checks the sensors operation. These sensors may be returned to our factory for Functional Testing.

Cleaning:

Note: The sensor head should NOT be disassembled.

- i) Carefully remove the heat sensor from its base.
- ii) Use a soft, lint-free cloth, moistened with alcohol for sticky deposits, to clean the plastic cover.
- iii) Using a soft bristle brush (e.g. an artist's paintbrush) carefully brush between the vanes and thermistor in a linear motion away from the apertures on the plastic case.
- iv) Ensure that no debris is left on or around the thermistor once cleaning is complete.
- v) If the unit needs further cleaning or is damaged or corroded, please return the complete sensor to Nittan Europe Ltd. for service.

Section 6 - SPECIFICATIONS

Model Reference:	-	ST-H2-AS
Computer Reference:	-	F15-81300
Sensitivity:	-	A2S - 54 °C to 70 °C.
Sensor Type:		Thermistor of low thermal mass
Operating Current:	-	Quiescent - 500µamps Fire alarm - 5.2mA (LED on)
Standard:	-	EN54 Part 5:2000
Mass:	-	100g (excluding base)
Charging Time:	-	20 seconds
Ambient Temperature Range:	-	-10 °C to +55 °C (A2S)
IP Rating:	-	42

Section 7 - ENVIRONMENTAL PARAMETERS**Temperature Considerations:**

Over the range from -10 °C to +55 °C

Humidity:

Relative Humidity of up to 95%, measured at 50 °C, non condensing.

Section 8 - EMC**Installation**

The installation shall be in accordance with the regulations either of the approval body for an approved system, or otherwise, to the national code of practice/regulations for the installation of the fire alarm system, e.g. BS 5839 part 1.

Electromagnetic Compatibility (EMC)

On a site where there is an unusually high level of potential electrical interference, e.g. where heavy currents are being switched or where high levels of R.F. are prevalent, care then must be taken in the type and routing of cables. Particular care should be given to the separation of zone wiring from the cable carrying the interference.

Section 9 - ADDRESS SETTING


Use MTM-E Programmer for setting the address of all devices prior to installation.

Section 10 - END OF LIFE

Like all electronic equipment, at the end of its working life this unit should not be disposed of in a refuse bin. All Nittan products since 2005 have been marked with the WEEE Logo in compliance with European Directive 2002/96/EC and Nittan Europe Limited is a member of a WEEE Compliance Scheme.

Contact sales@nittan.co.uk for a copy of our WEEE Compliance Policy.

Section 11 - CONNECTIONS

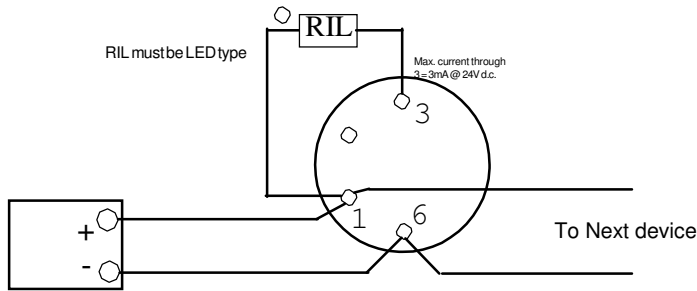

UB-4, UB-6-EV, or STB-4SE-EV base

Auxiliary terminal RIL current limited to 3mA. If the +ve supply for the auxiliary equipment is taken from the Sensortec loop, care must be taken to not cause corruption of the Sensortec protocol by excessive current draw.

Section 11 - DIMENSIONS

